MOTIVATION MULTISPORT / MULTISPORT JUNIOR WHEELCHAIR

ASSEMBLY MANUAL





EDITION OCTOBER 2013


Contents

- Bumper assembly 1
- Backrest assembly and height adjustment 2
- Adult footrest adjustment 5
- Junior footrest adjustment 6
- Rear Anti Tip wheel adjustment 7
- Rear wheel assembly 8
- Care and maintenance Instructions 9





Bumper Assembly

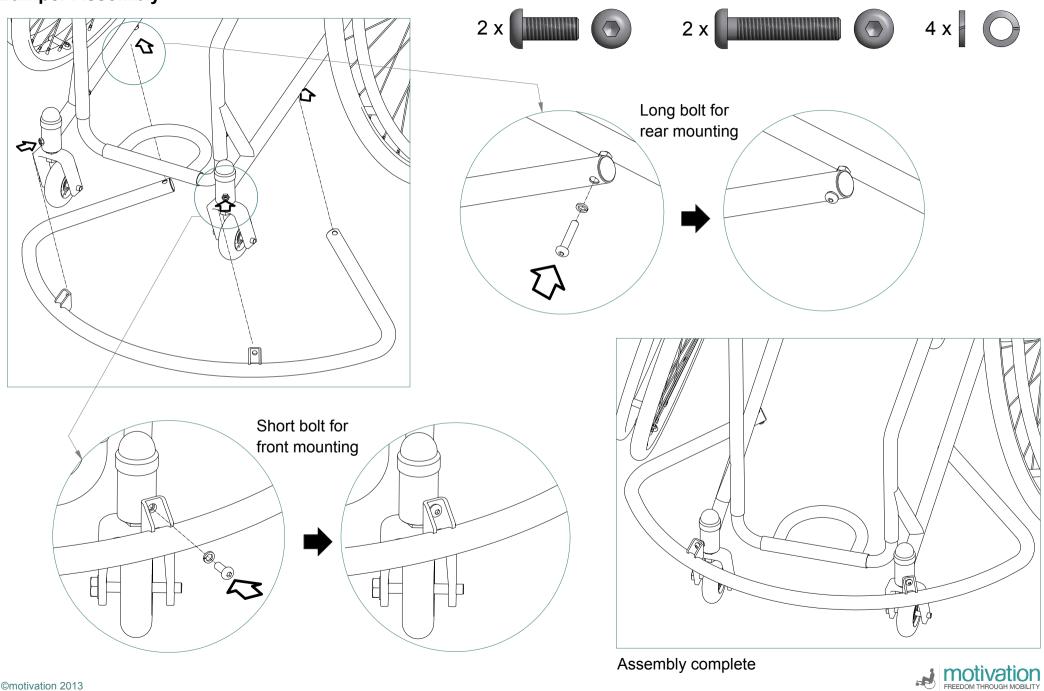

2 x 2 x \bigcirc \bigcirc \bigcirc (1:2) 3 height options \mathbf{r} Low Medium High \mathcal{P} \bigcirc \sim 0 0 0 6 Ô 6 \square 6 6 0 Ó Ô


©motivation 2013



 \bigcirc


 \bigcirc

Backrest assembly and height adjustment

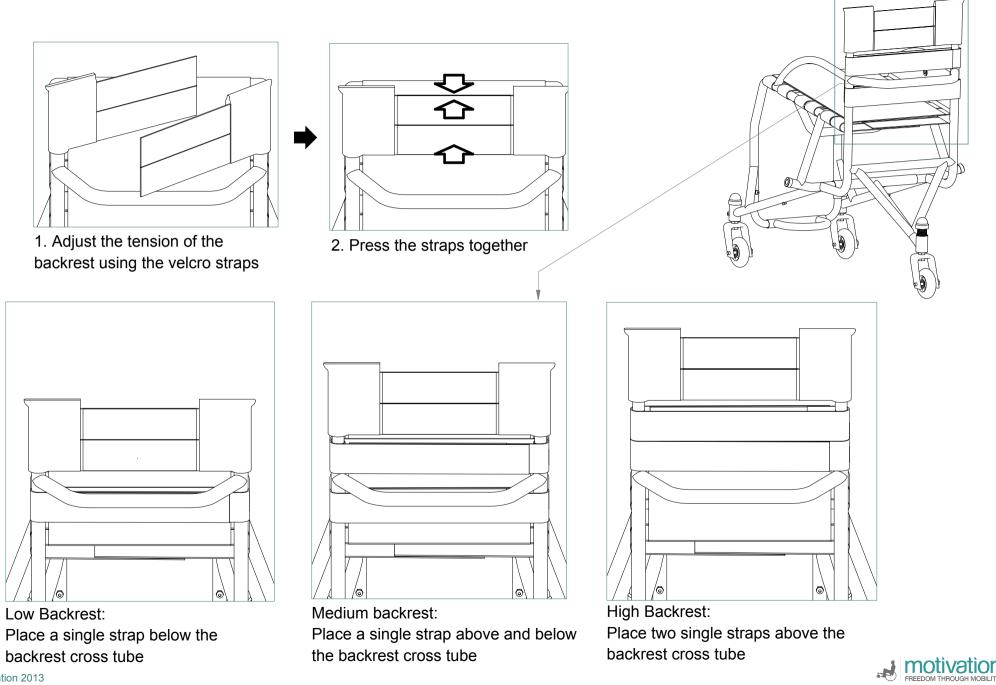


EREEDOM THROUGH MOBILIT


Backrest assembly and height adjustment

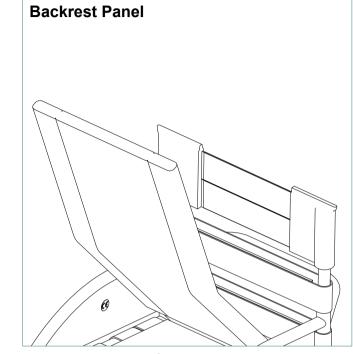

1. Fix the bottom of the Backrest Panel, down to the seat, using the velcro strips

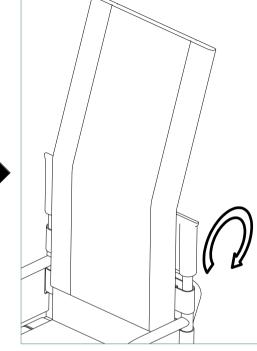


2. Fix the Backrest panel, to the front of the backrest straps, using the velcro strips

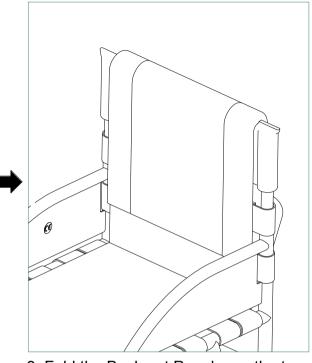


3. Fold the Backrest Panel over the top of the backrest straps and fix to the back of the straps using the velcro strips

 
Rear Padding






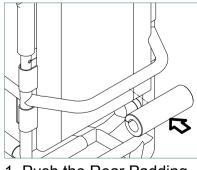


1. Push the Rear Padding over the cross tube

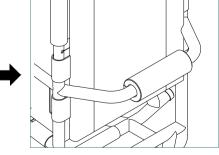


2. Place Rear Padding in the centre of the cross tube

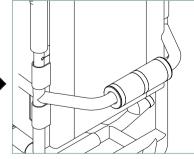

3. Use strong tape to hold the Rear Padding in Place

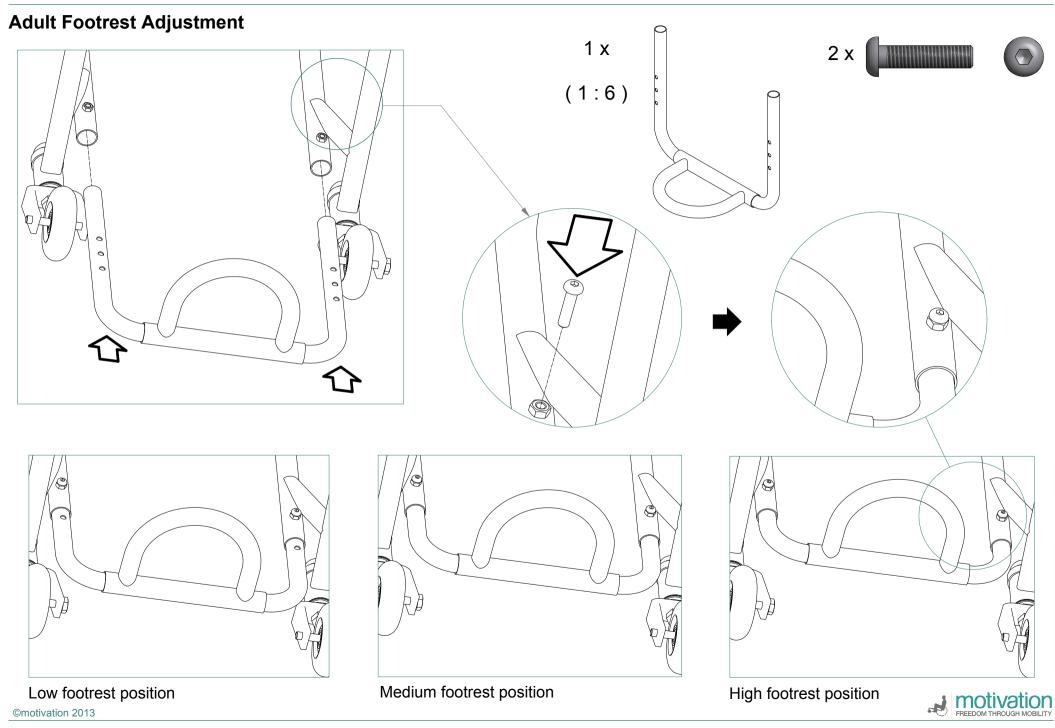

Junior Footrest Adjustment

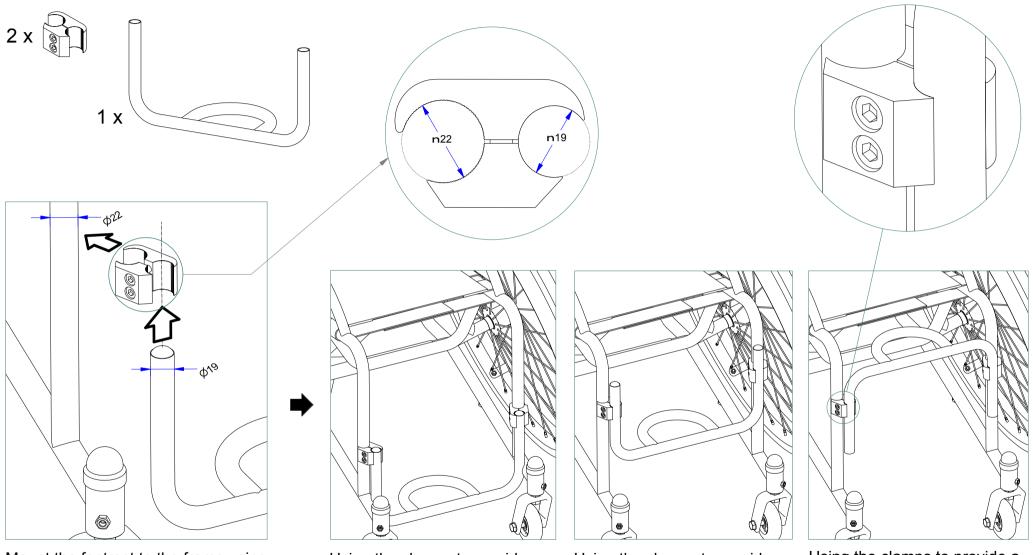


Mount the footrest to the frame using the two tube clamps provided, making sure to clamp the correct tube into the correct side of the clamp Using the clamps to provide a low footrest position


Using the clamps to provide a medium footrest position

Using the clamps to provide a high footrest position




Rear Anti Tip Wheel Adjustment

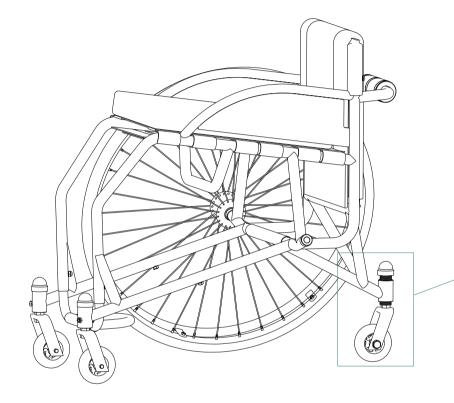


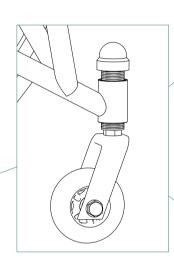

Medium height: washers are placed above and below the castor barrel

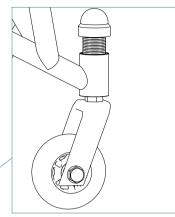


High height: washers are placed above the castor barrel

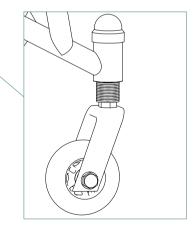

Low height: washers are placed below the castor barrel



Rear Wheel Assembly

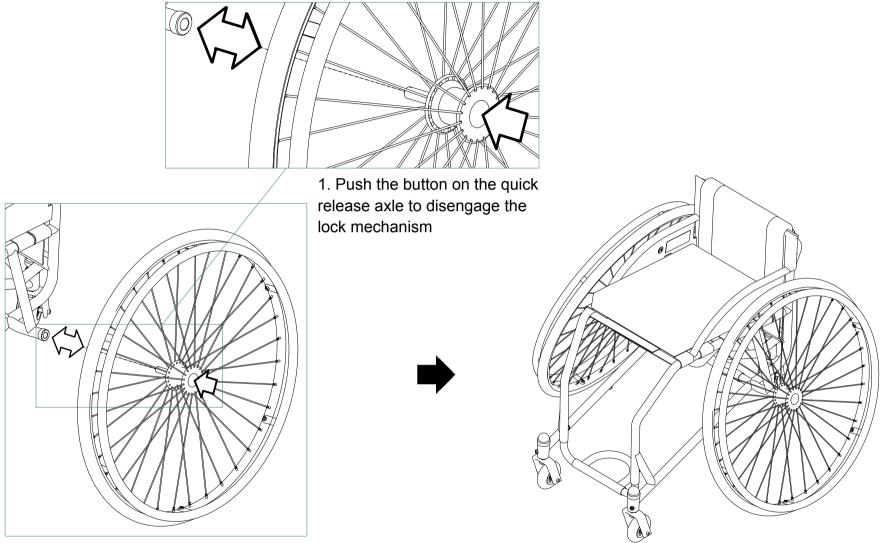

2. Slide the quick release axle into the axle mounting on the frame.

Let go of the button to lock the axle into the frame



Care and Maintenance Instructions



- 1. Cushion and upholstery
- · Check condition at least once a month
- · Look for ripped fabric or seams and worn out foam
- Keep the cover and seat upholstery tight at all times
- Wash cushion cover and upholstery whenever it is unclean or if it comes in contact with urine
- Dry the cushion and upholstery fully before re-fitting to the wheelchair
- Never expose the cushion to direct sunlight, even when drying
- 2. Castor and fifth wheel
- If the castor wheels or fifth wheel do not run smoothly, the bearings may need changing

3. Rear wheels

- If the wheels do not run smoothly, the bearings may need changing
- Check tyres are hard daily and pump tyres when soft to ensure tyres last longer
- Fix any punctures immediately
- Check spokes are tight at least once a month
- Check the rear wheel quick-release axles are secure at least once a month
- 4. Footrest
- Never put hand on the footrest during transfers
- Never stand or carry loads on the footrest castor and fifth wheel
- 5. Protective bumper
- At regularly intervals check that all four bolts are tight

